

920066PL USER MANUAL

Thermal actuators are mainly used in floor heating systems to control closing and opening of the valves. It is specifically applied to electric drive part of the branch manifold valve, small valve and dynamic balance valve. No noise, fast installation and easy disassembly.



Feature:

Compact size, small dimensions

Noiseless

Low power consumption

Fast installation and disassembly

Various adapters

Full view stroke indication

Techinical parameters:

Control direction: Normally closed/Normally open

Voltage: 12v 24v 230v

Power consumption: 2W

Stroke: ≥4mm

Closing and opening time: 3-5mins

Standard: EN 60730

Force:100±10N

Protection Grade: IP54

Working temperature: -5 $^{\circ}$ C -60 $^{\circ}$ C


Adapter: M30x1.5mm/M28x1.5mm

Cable length: 800MM

Housing material: PA66+30%GF


Dimensions:

Unit: MM

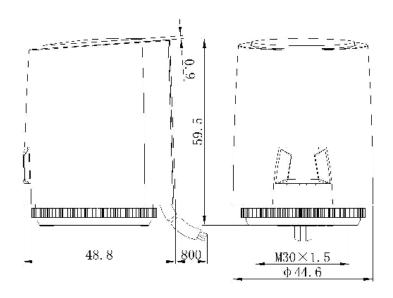

Installation and disassembly:

Installation:

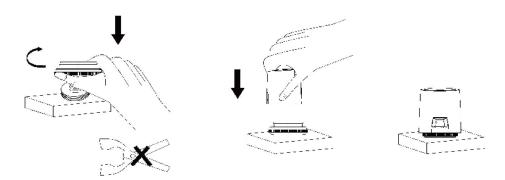


Step 1 Rotate the nut clockwise and install it on the valve (Note:Do not use pipe pliers)


Step 2 Press down on the actuator against the adapter

Step 3 Finish installation

Disassembly:

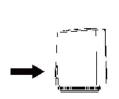

Step 1
Press the button with your hand

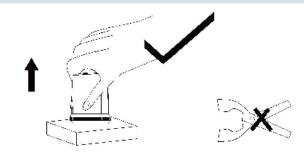



Step 2 Press and hold the button and lift up to remove the actuator

Step 3 Do not use pipe pliers, clamp and other tools


Precautions:


Indication cover confirmation

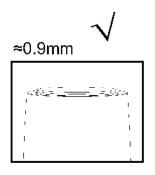

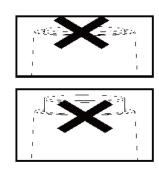

Working situation

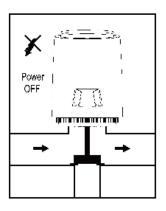

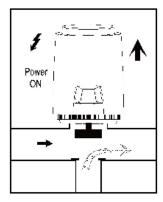

Normal situation

Abnormal situation

N/C normally closed